

Mode	el:			
Seria	ıl Numbe	r:		
Note	S:			

### **Air Handling Section**


- 1 Fan Guard
- 2 Fan Cowl
- 3 Axial Fan Assembly (see detailed view)
- 4 Davit Fan Assembly (optional)
- 5 Mechanical Access Door

# **Air Handling Section**

- **6** Spray Branch Heater
- 7 Spray Branch
- 7A CF Nozzles
- 8 BACPak<sup>™</sup> Fill

#### **Water Collection Section**

- 9 Inlet Louvers
- 10 Sump Sweeper Piping (optional)
- 11 Strainer Assembly
- 12 Make-up Valve Assembly
- 13 Float Ball
- 14 Basin Heater

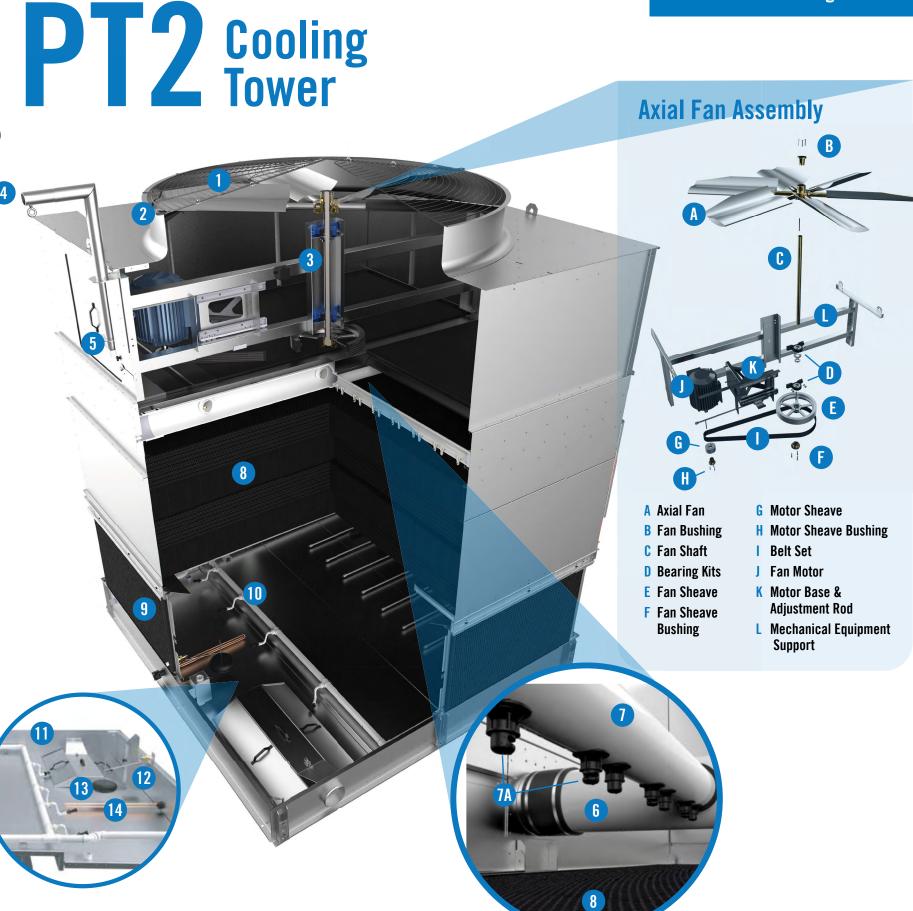

Reduce Downtime
Spare Parts List (page 2)

# **Recommended Spare Parts**

**BAC Factory Authorized Parts** are manufactured to meet rigorous specifications and are guaranteed to fit your unit and perform as original equipment.

BAC Factory Authorized Parts can be ordered through your local BAC Representative. Most BAC Representatives maintain a local inventory of commonly used parts. For a free unit inspection and a specific parts list for your serial number, contact your local BAC Representative today.

Even with BAC's fast delivery capability, it is still recommended that certain essential and emergency repair part be maintained in your inventory to minimize any potential downtime.



Find my BAC Rep to order parts, get maintenance tips, and get a free unit inspection: www.baltimoreaircoil.com/RepFinder



# PT2 Cooling Tower

**Internal Motor Configuration** 

# **Basic Recommended Spare Parts**

# Parts to Consider for Critical Applications

**Bearings** 

Bearing Greaser Refill (if equipped)

**Belts** 

Basin Heater & LWCO (if equipped)

**Door Gaskets** 

Float Valve Kit & Float Ball

**Solenoid Valve** (if unit is equipped with EWLC)

Spray Nozzles & Grommet Kit

**Suction Strainer** 

**Prop Fans with Bushings** 

**Fan Shaft** 

**Sheaves and Bushings** 

**Fan Motor** 



