



# PARTS MAP

Model: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Notes:

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_


## Upper Casing Section

- 1 Hot Water Basin
- 2 XF Spray Nozzles
- 3 BACross III® Upper Fill with Integral Drift Eliminators
- 4 Axial Fan and Bushing Assembly
- 5 ENDURADRIVE™ PM Motor
- 6 ENDURADRIVE™ ME Support
- 7 Fan Guard Assembly
- 8 Fan Cylinder
- 9 FRP Casing Panels

## Lower Pan Section

- 10 BACross III® Lower Fill with Integral Drift Eliminators
- 11 Make-up Valve Assembly
- 12 Float Ball
- 13 Pan Strainer
- 14 Pan Strainer Hood
- 15 Internal Walkway
- 16 Access Door

# Series 3000 Cooling Tower

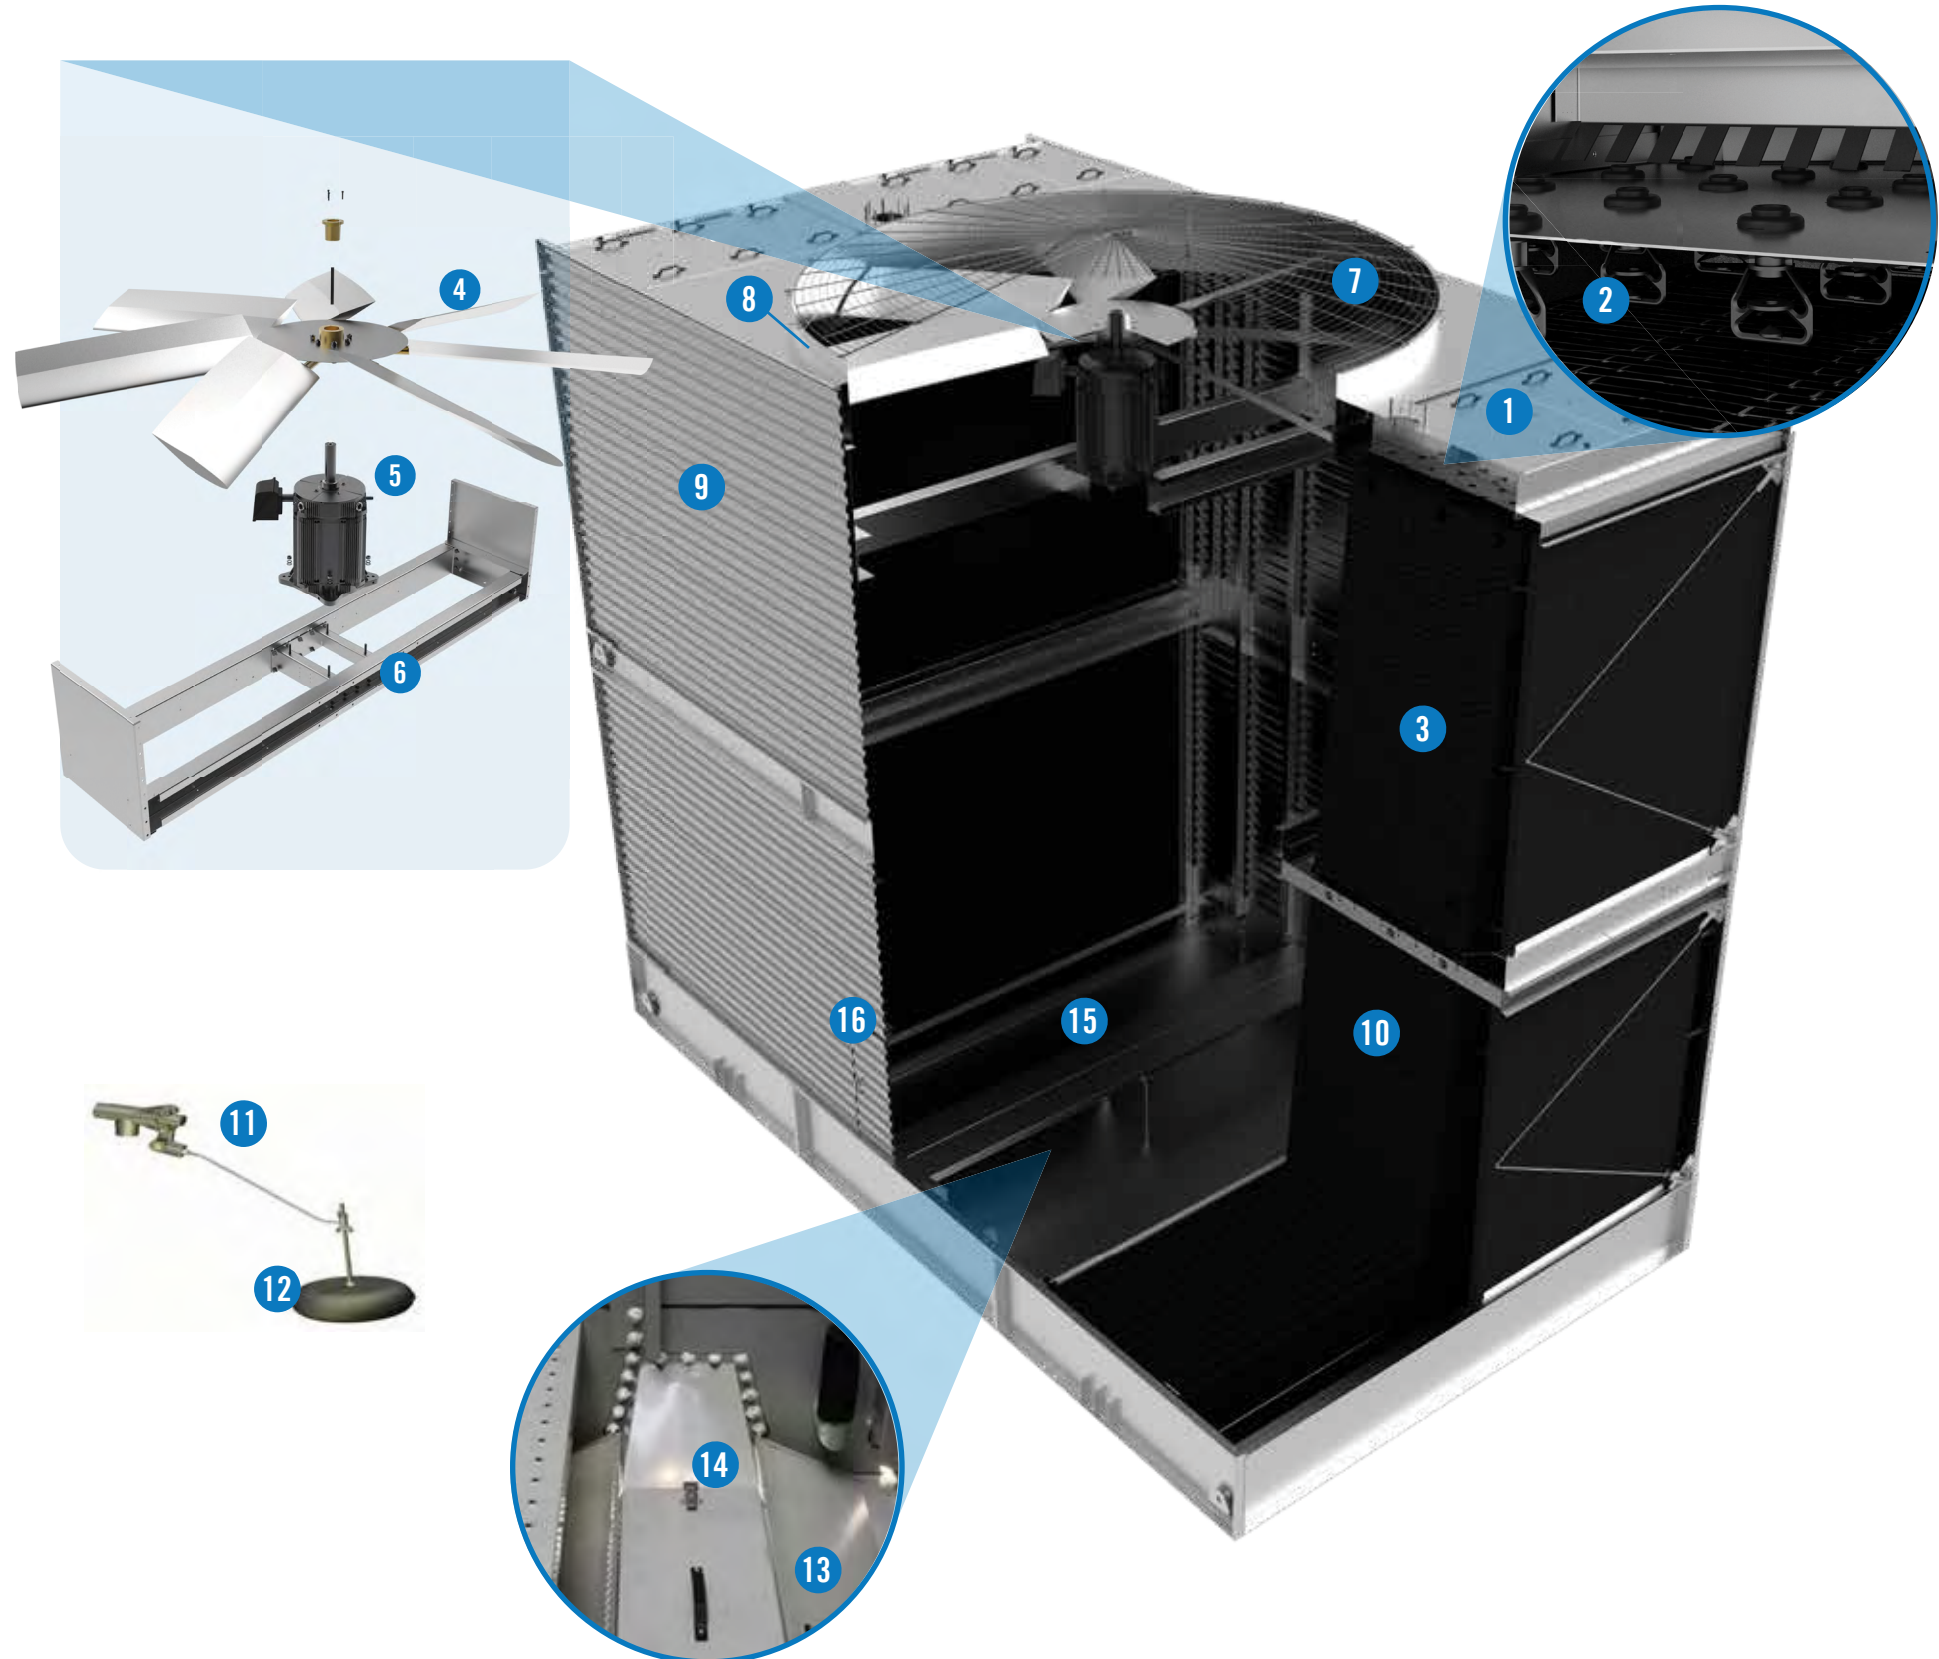

**Reduce Downtime**  
Spare Parts List (page 2)

# Recommended Spare Parts


**BAC Factory Authorized Parts** are manufactured to meet rigorous specifications and are guaranteed to fit your unit and perform as original equipment.

BAC Factory Authorized Parts can be ordered through your local BAC Representative. Most BAC Representatives maintain a local inventory of commonly used parts. For a free unit inspection and a specific parts list for your serial number, contact your local BAC Representative today.

Even with BAC's fast delivery capability, it is still recommended that certain essential and emergency repair part be maintained in your inventory to minimize any potential downtime.



Find my BAC Rep to order parts, get maintenance tips, and get a free unit inspection: [www.baltimoreaircoil.com/RepFinder](http://www.baltimoreaircoil.com/RepFinder)

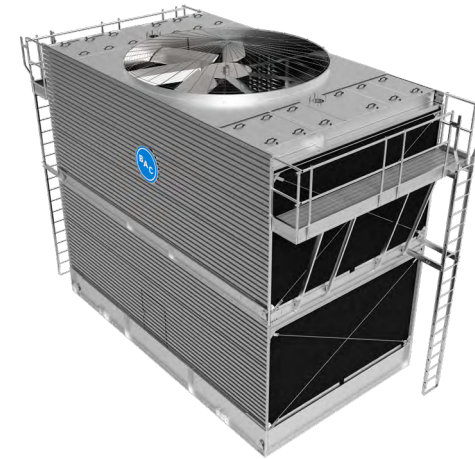

## Series 3000

Cooling Tower

**ENDURADRIVE** Configuration  
Fan System

### Basic Recommended Spare Parts

**Basin Heater & LWCO** (if equipped)

**Float Valve Kit & Float Ball**

**Spray Nozzles**

**Suction Strainer**

### Parts to Consider if Extended Downtime is a Concern

**Fan**

**Fan Motor**



Scan to locate your local BAC Representative